



## INSTALLATION INSTRUCTIONS

### Accessory

ALL-SEASON FLOOR MATS  
P/N 08P13-SZT-110

### Application

CR-Z

### Publications No.

All 50490


### Issue Date

SEP 2013


Put this information in the glove box with the vehicle owner's manual

### PARTS LIST


Driver's all-season floor mat

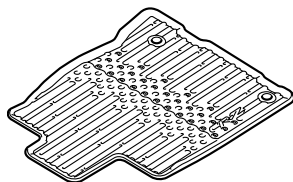

Passenger's all-season floor mat

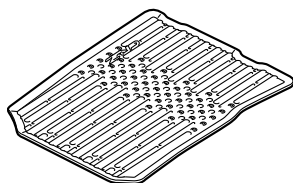

### Illustration of the All-Season Floor Mats in the Vehicle

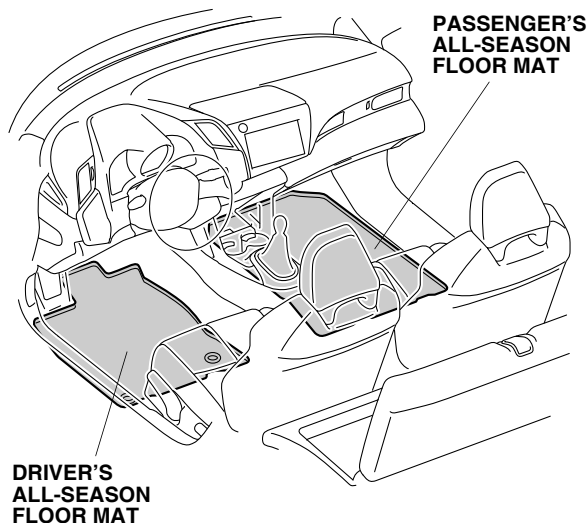


### INSTALLATION


#### NOTE:

- An anchor is required for the driver's side of the vehicle; the anchor prevents the mat from sliding forward and possibly interfering with the pedals.
- If you remove the all-season floor mat, make sure you reanchor it when you put it back in your vehicle.
- If you replace the all-season floor mat, use a factory all-season floor mat designed to be used with the anchor.
- If you use a non-factory mat in the driver's foot well, make sure it fits properly and that it can be used with the anchor.
- Do not put an additional mat on top of the anchored mat. An additional mat may slide forward and possibly interfere with the pedals.
- Identify each mat by the marks on the back of each mat: the mat marked "R" or "Passenger's side" goes on the right side of the vehicle; the mat marked "L" or "Driver's side" goes on the left side.


1. Remove the vehicle driver's floor mat by turning each anchor knob 90° to release the lock.

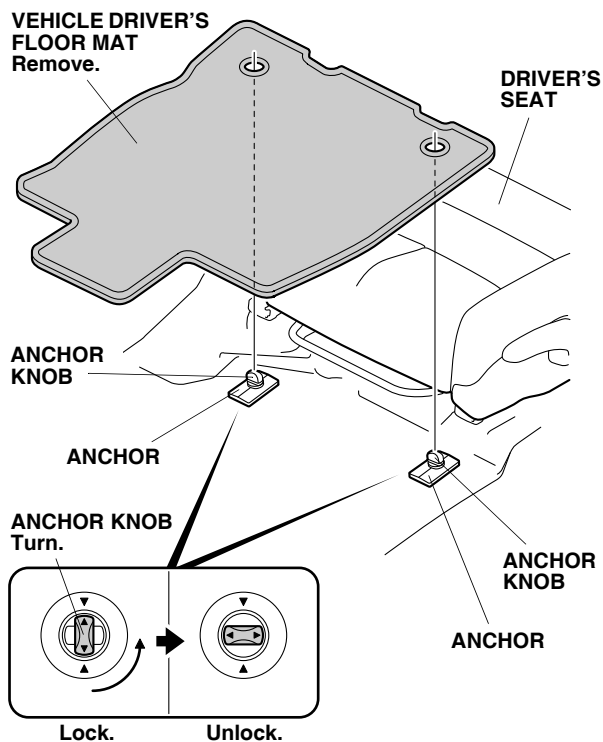

2. Install the rings in the driver's all-season floor mat over the anchors. Turn the knob on each anchor 90° to secure the driver's all-season floor mat.

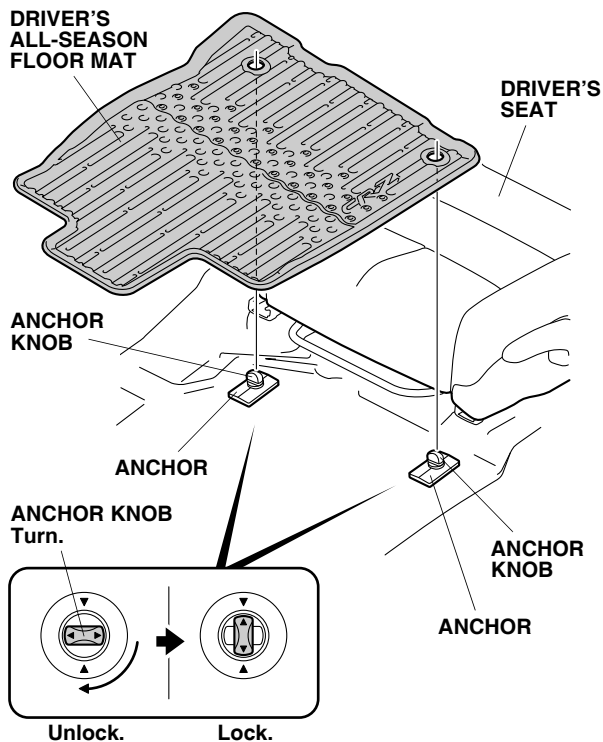

3. Remove the vehicle passenger's floor mat.

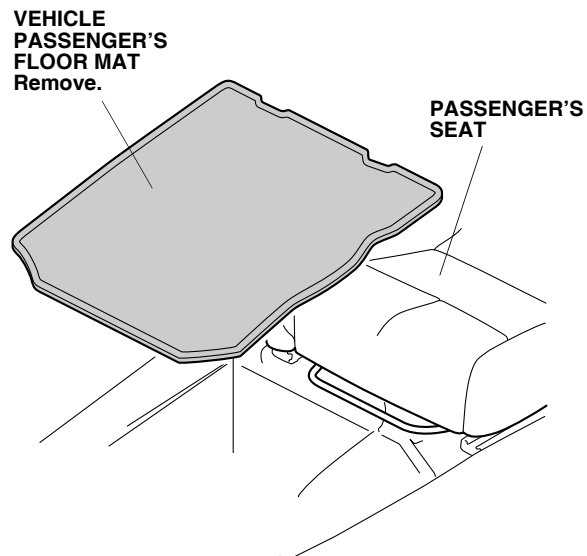

4. Install the passenger's all-season floor mat as shown.

